LED WALL PACK LIGHT(WK04)

WATTAGES: 120/100/80/60/40W Tunable



The WK04 series half cut wall pack retains the traditional installation method and meets the installation needs of most occasions.

Product Features:

- Aesthetic, utility appearance, and patented;
- Adopting high transparency tempered glass cover.
- Low-voltage light control sensor can be installed, which is safe and reliable;
- Power and CCT selectable are available to meet the different needs of customers and reduce the inventory pressure ;
- Easy and fast installation , and traditional junction box installation method is retained;
- IP65, completely waterproof and dustproof;
- 120-277V / 0-10V and 120-347V/277V-480V, 0-10V dimming power supply are available.

SPECIFICATION	
MODEL	SS-WK0412-120W-H-TCP
WATTAGE	120/100/80/60/40W Tunable
LUMENS	17340LM(Max)
CCT	3000K/4000K/5000K Tunable
CRI	Ra>70
INPUT VOLTAGE	AC120-277V/AC120-347V/AC277-480V
OPERATING TEMPERATURE	-40°F~113°F
STORAGE TEMPERATURE	-40°F~158°F
POWER FACTOR	> 0.9
DRIVER EFFICIENCY	> 90%
PROTECTION LEVEL	Wet Location
LIFE TIME	> 50000 hours
WARRANTY	5 years limited


LED WALL PACK LIGHT(WK04)

WATTAGES: 120/100/80/60/40W Tunable

Packing/Weight

Model	Inner box (1pcs/ctn)	Outber box (4pcs/ctn)	N.W (1pcs/ctn)	G.W (1pcs/ctn)	N.W (4pcs/ctn)	G.W (4pcs/ctn)
120/100//80/60/40W	L14.56xW9.69xH8.19 inch L370xW246xH208 mm	L20.35xW15.35xH17.95 inch L518xW390xH456 mm	8.27 LBS(3.75Kg)	9.15 LBS(4.15Kg)	33.05 LBS(14.99Kg)	36.6 LBS(16.6Kg)

Product Dimension

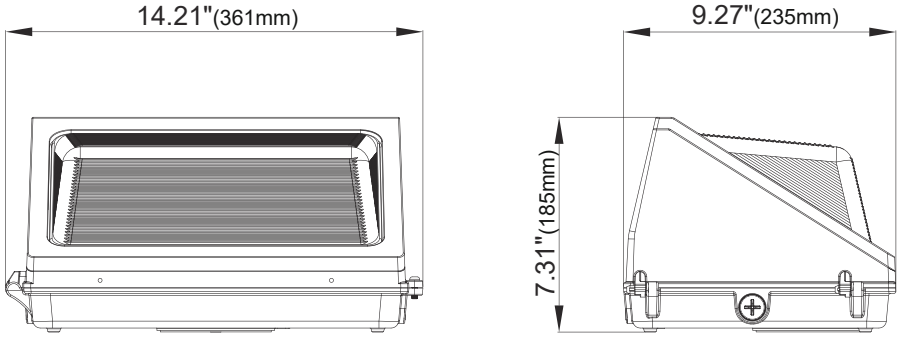

Product Accessories

ACCESSORIES MOUNTING BRACKETS(Standard)



4 Pcs Screws



5 Pcs Wire Nuts



1 Pcs foam

ACCESSORIES(Sold Separately)



ANT-5-4T
ANT-6-4T



ANT-5-16B-3



Emergency Driver

LED WALL PACK LIGHT(WK04)

WATTAGES: 120/100/80/60/40W Tunable

ORDERING GUIDE:

EXAMPLE:


SS-WK0412-120W-H-XX-TCP-Y

SS	WK04	12	120W	H	xx	TCP	Y
COMPANY	PRODUCT	DRIVE	POWER	HIGH LUMENS	INPUT VOLTAGE	CCT	CONTROL
Starlake	LED WALL PACK LIGHT (WKO4)	Represenls 120W Led Driver	120W=120/100/80/60/40W		Blank=120-277Vac MV=120-347Vac HV=277-480Vac	3000K/4000K/5000K	A: PIR sensor (Infrared sensor) B: MS sensor (occupancy sensor) C: BRT sensor (occupancy+bluetooth) D: PHB sensor (Infrared bluetooth) E=Photocell Balnk: no provide sensor


PHOTOMETRICS:

For complete IES files, please visit our website.


SS-WK04-40W-5000K

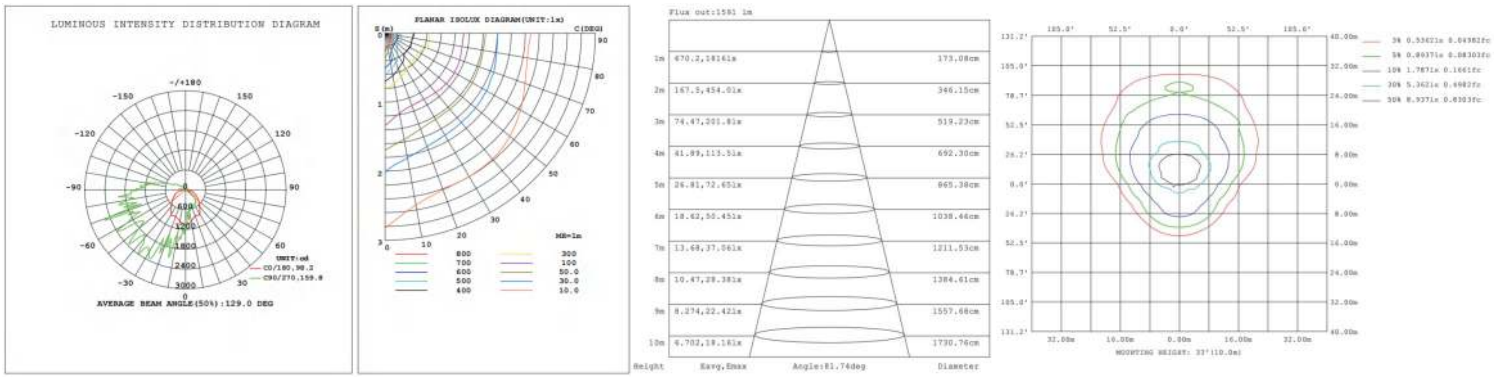

SS-WK04-60W-H-5000K

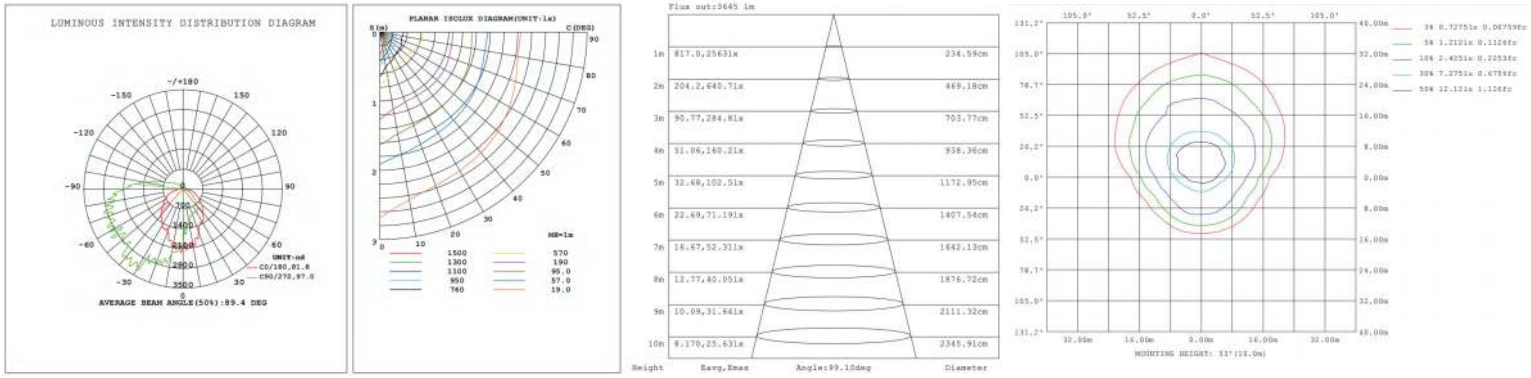


SS-WK04-80W-H-5000K

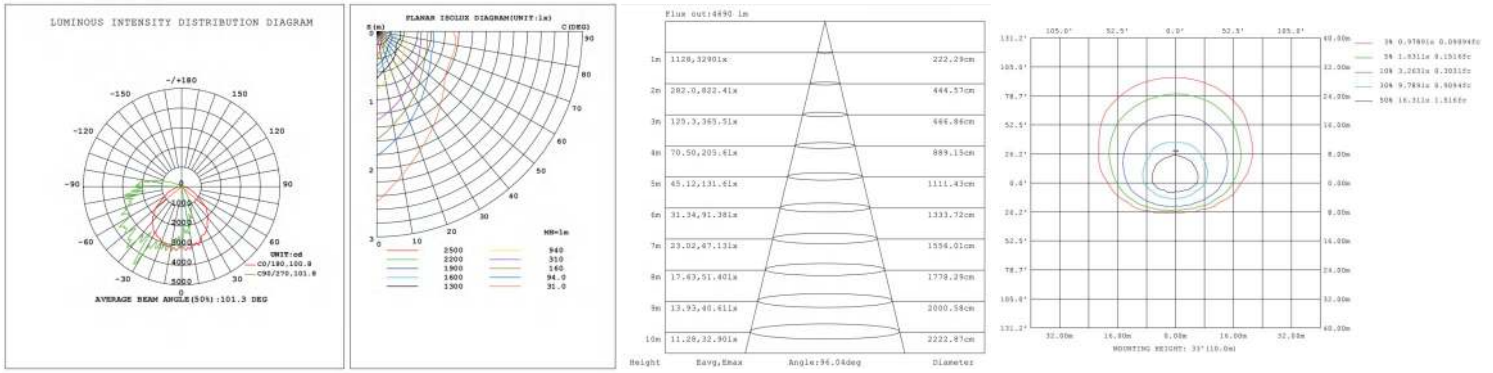


LED WALL PACK LIGHT(WK04)

WATTAGES: 120/100/80/60/40W Tunable

SS-WK04-100W-5000K

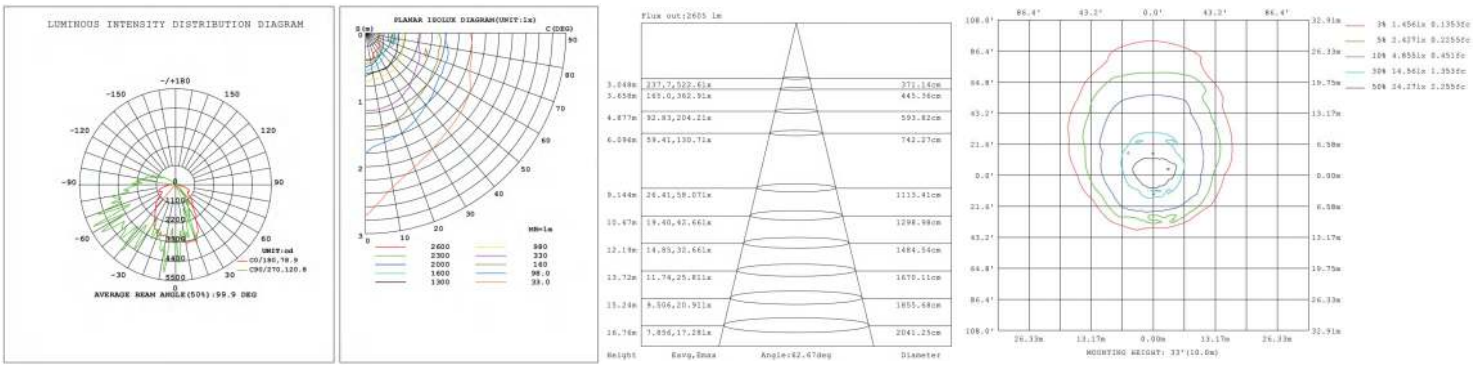


SS-WK04-120W-5000K

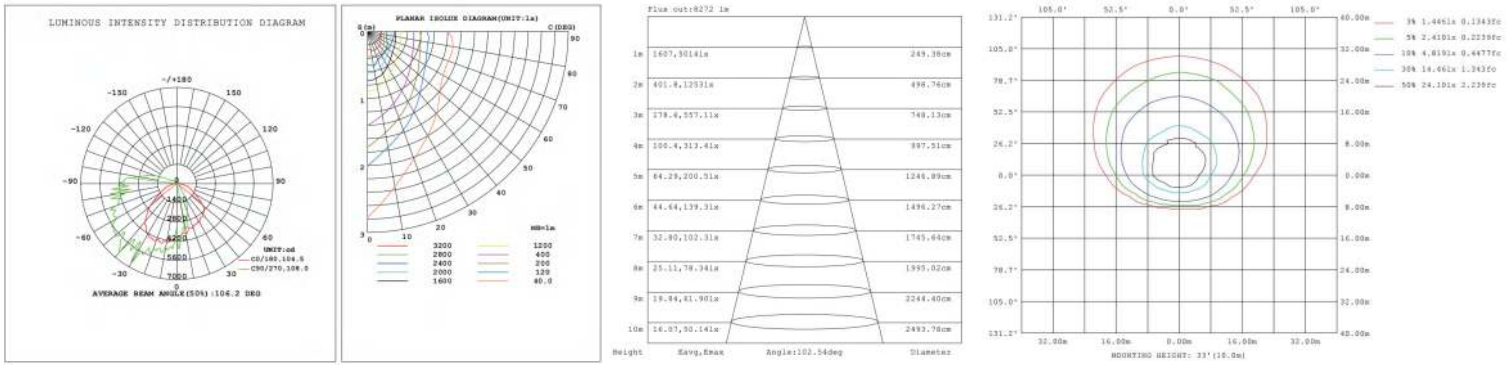


Installation Instruction


1.Use a screw driver to unscrew the lamp screws and remove the uppper half of the fixture.

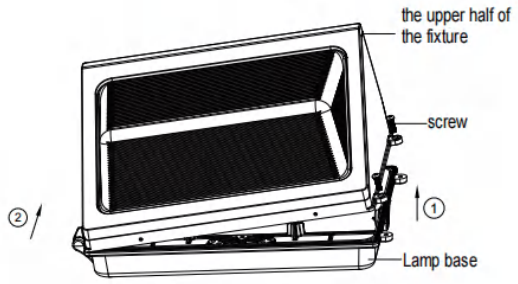


2.Unscrew the cover of the entry hole on the lamp base and remove the cover .

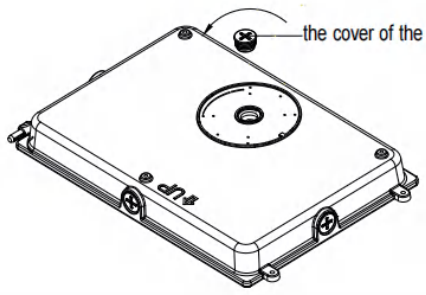

3. According to the embedded terminal box, punch the correspongding mounting hole on the light 's mount .

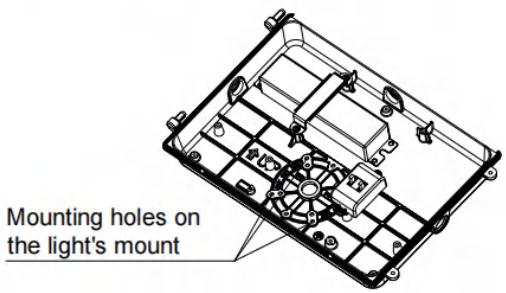


4. Put the input line in the embedded box passes through the waterproof pad and then passed through the lamp base.

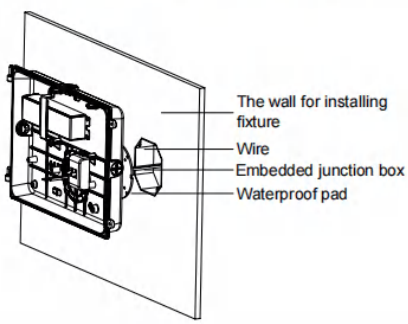


LED WALL PACK LIGHT(WK04)

WATTAGES: 120/100/80/60/40W Tunable


5.Use screw to lock the lamp base on the embedded junction box.

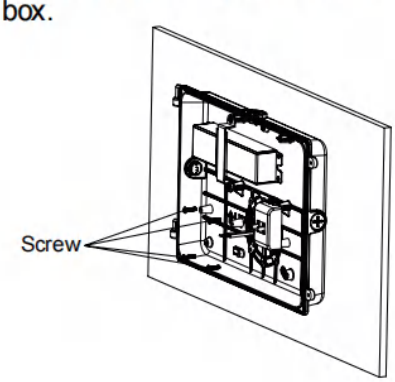


6.Connect the input wire and the dimming wire of the light , then put the connected wires into the embedded terminal box.

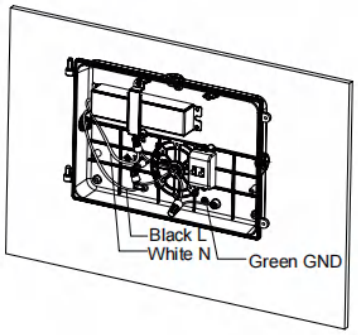

7.Connect the out put wires of driver with the wires of PCB board.Please use“Dipper Switch”,to achieve “Power and CCT Tunable” function.

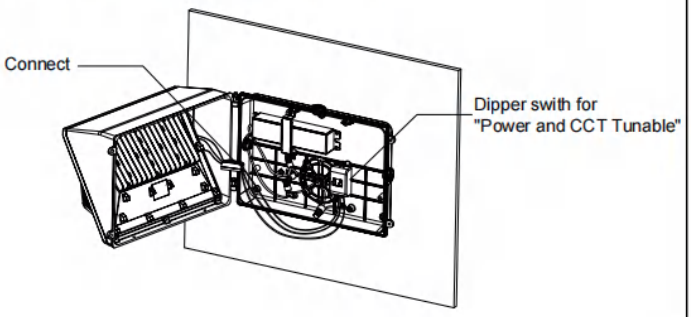

8.Use screws to lock the fixture. Installation completed.

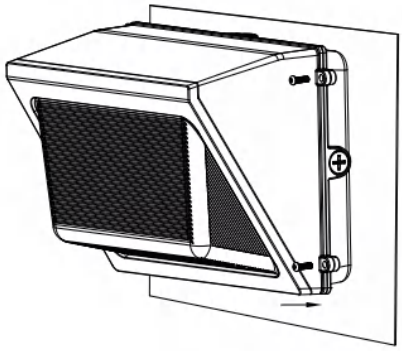

Applications:

