LED WALL PACK LIGHT (WK05G)

WATTAGES: 120/100/80W Tunable



WK05P series wall pack retains the shape and installation me thod of traditional wall pack, which is convenient and fast to install.
The lower outlet hole is added to meet the requirements of different installation sites for the incoming line mode.

Product Features:


- Aesthetic, utility appearance, and patented;
- High transmittance anti UV PC lens.
- Low-voltage light control sensor can be installed, which is safe and reliable;
- Power and CCT selectable are available to meet the different needs of customers and reduce the inventory pressure ;
- Easy and fast installation , and traditional junction box installation method is retained;
- IP65, completely waterproof
- 120-277V/120-347V, 0-10V dimming power supply are available.


	SPECIFICATION
MODEL	SS-WK0512G-120W
WATTAGE	120/100/80W
LUMENS	16800LM(Max)
CCT	3000K/4000K/5000K
CRI	Ra>70
INPUT VOLTAGE	AC120-277V/AC120-347V
OPERATING TEMPERATURE	-40℉~113℉
STORAGE TEMPERATURE	-40℉~176℉
POWER FACTOR	>0.90
DRIVER EFFICACY	>90%
PROTECTION LEVEL	Wet Location
LIFESPAN	>50,000hrs
WRRANTY	5 years limited


LED WALL PACK LIGHT (WK05G)

WATTAGES: 120/100/80W Tunable

Product Dimension:

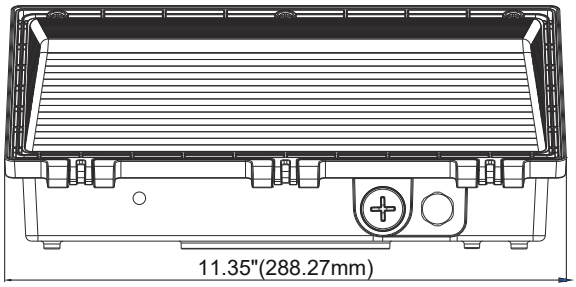

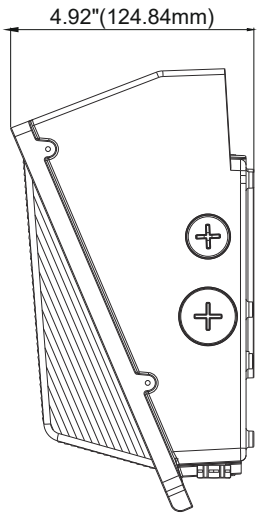

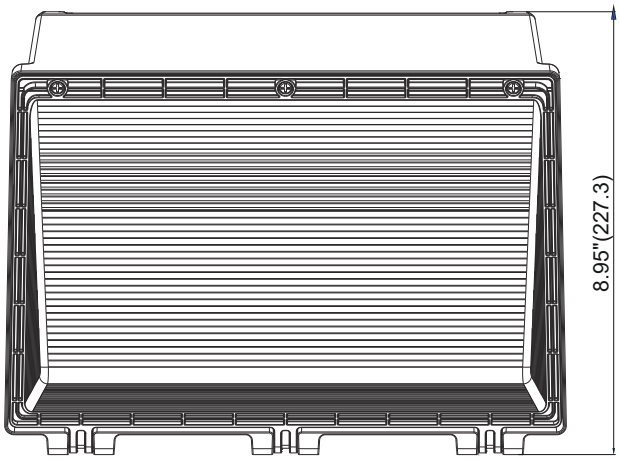

Model	Packing	Outer Box size	Net Weight	Gross Weight	pcs/ctn
120/100/80W	Outer Packing Size	L11.85xW6.65xH16.46 inch L301xW169xH418 mm	7.94Lbs(3.60Kg)	9.70Lbs(4.40Kg)	2pcs/ctn

ORDERING GUIDE:

EXAMPLE:

SS-WK0512G-XXW-H-XX-TCP-(XX)-Y

SS	WK0512G	120W	H	XX	TCP(xx)	Y
COMPANY	PRODUCT	POWER	HIGH LUMENS	INPUT VOLTAGE	Tunable CCT and Power	CONTROL
Starlake	Wall pack	120/100/80W		Blank=120-277Vac MV=120-347Vac	3000K/4000K/5000K	Photocontrol blank = no provide sensor.

Product Accessories

ACCESSORIES MOUNTING BRACKETS(Standard)



4 Pcs Screws



5 Pcs Wire Nuts



1 Pcs foam

ACCESSORIES(Sold Separately)



ANT-5-4T

ANT-6-4T



ANT-5-16B-3




Emergency Driver


LED WALL PACK LIGHT (WK05G)


WATTAGES: 120/100/80W Tunable


DISTRIBUTION:

60W

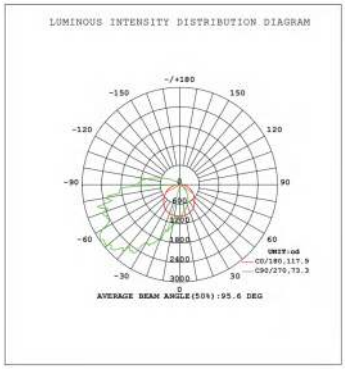


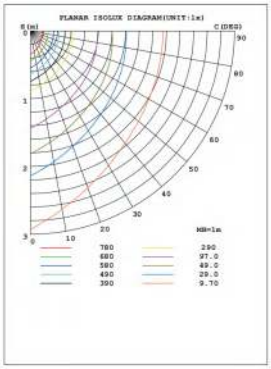


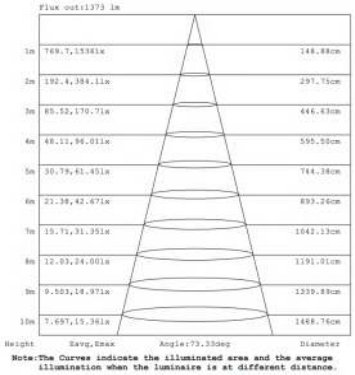


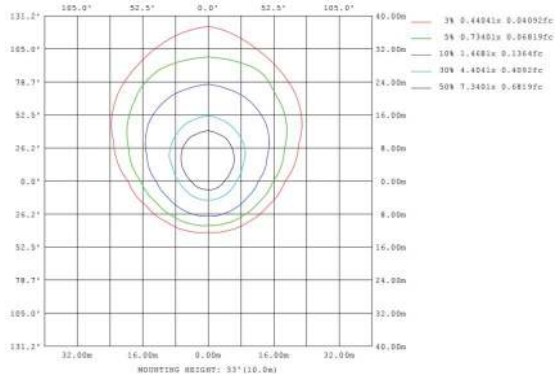


80W

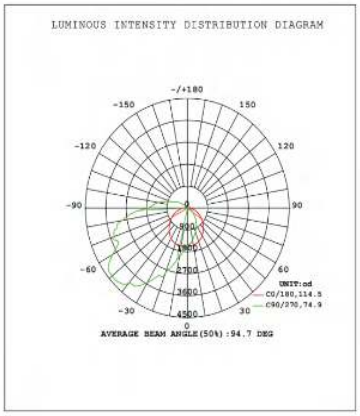


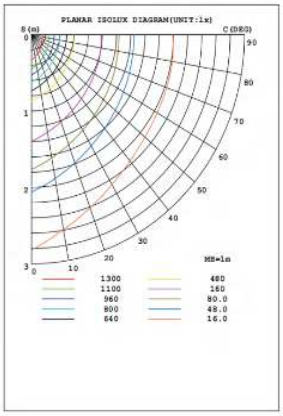


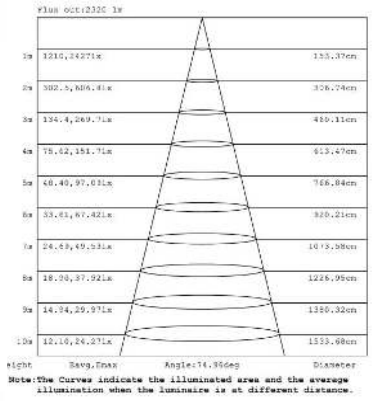


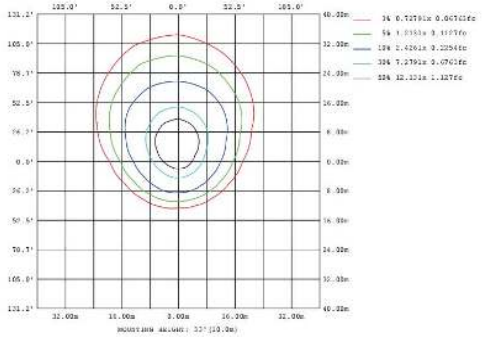


100W

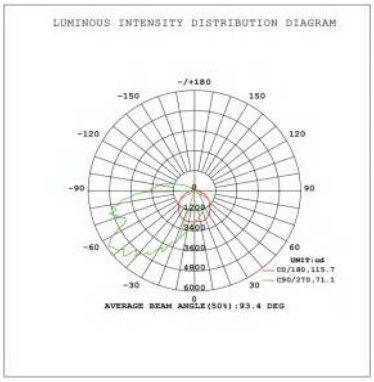


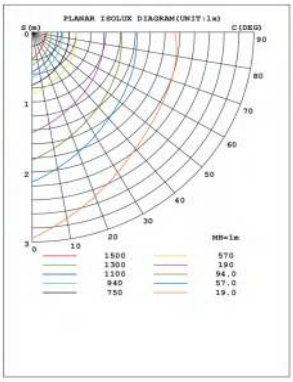


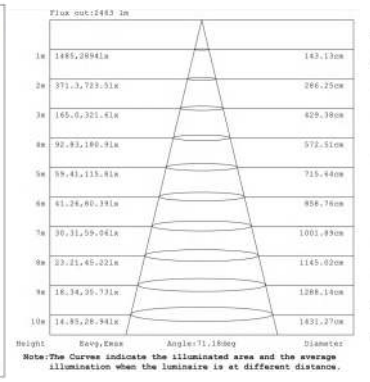


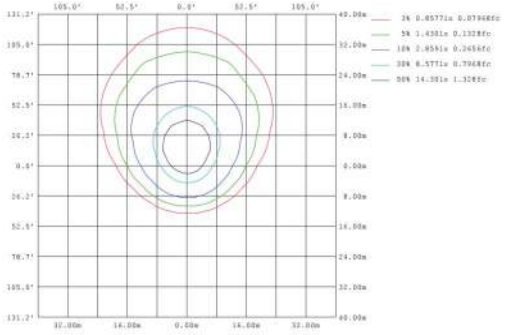


120W

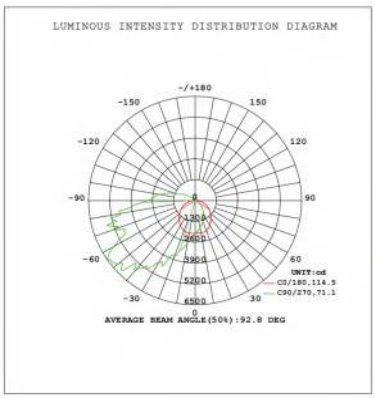

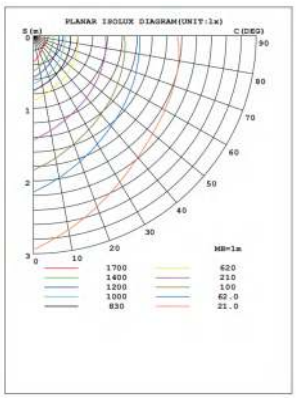

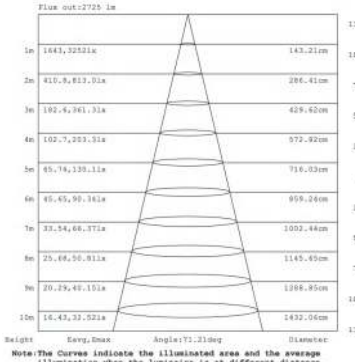

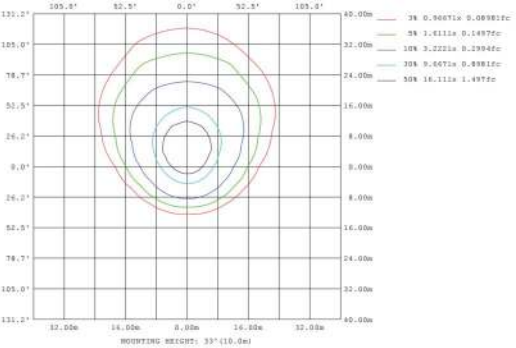


LED WALL PACK LIGHT (WK05G)

StarLake


WATTAGES: 120/100/80W Tunable

Installation Instruction:


1.Unscrew the larger tooth plug on the side of the lamp, use a Phillips screwdriver.

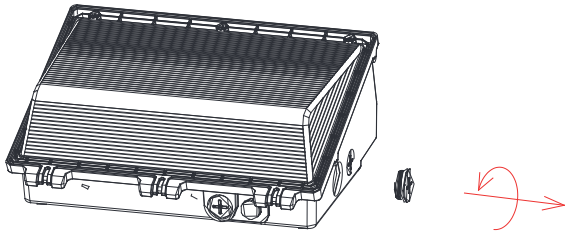


2.Adjust the power, color temperature, and light-sensing switches to the appropriate gear as needed.
If the purchased lamps do not have color temperature optional or photocell sensor function, the color temperature optional or photocell sensor gear is empty.

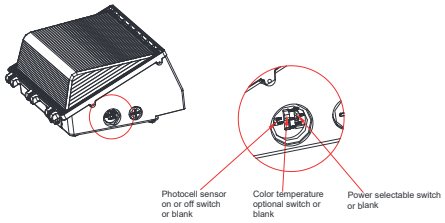


3.Attach the larger tooth plug to the light fixture, use a Phillips screwdriver.

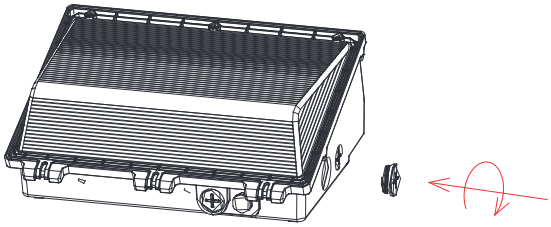


4.Use a screw driver to unscrew the lamp screwsand remove the uppper half of the fixture.

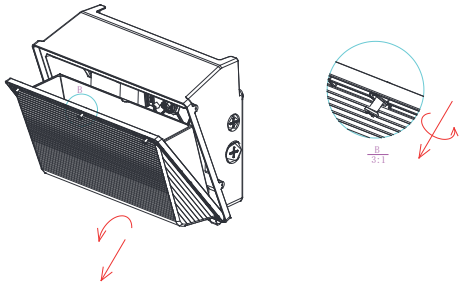


5.Unscrew the cover of the entry hole on the lamp base and remove the cover.

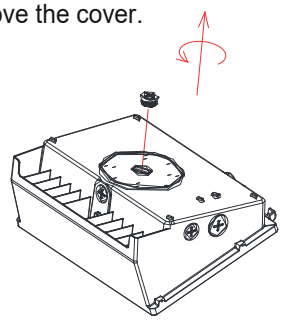


6.According to the embedded terminal box, punch the correspongding mounting hole on the light 's mount.

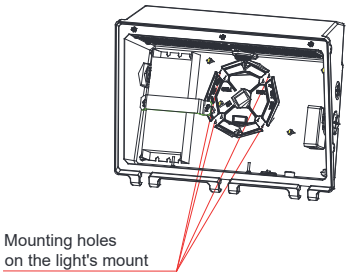

7.Put the input line in the embeddedbox passes through the waterproof pad and then passed through the lamp base.

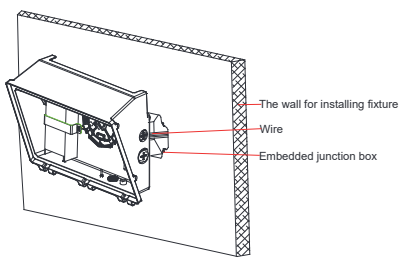


8.Usescrew to lock the lamp base on the embedded junction box， And ensure the balance of the horizontal column.

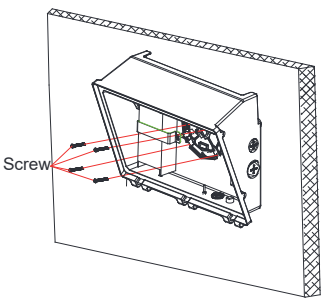


Installation Instruction:


9.Connect the input wire and the dimming wire of the light , then put the connected wires into the embedded terminal box.

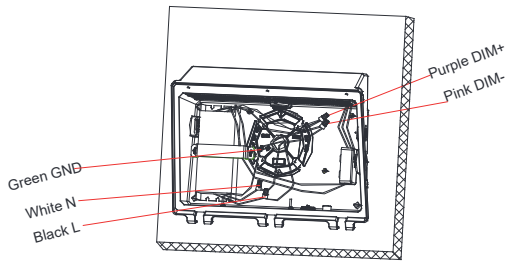


10.Insert the rotating shaft of the upper cover into the rotating shaft hole of the bottom shell.

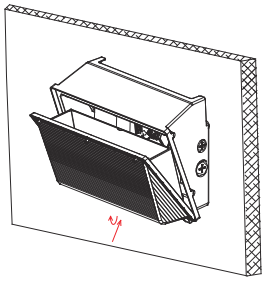

11.Lock the upper cover screws into the bottom shell with a cross screwdriver.

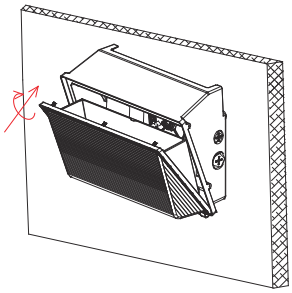

12.Fill the gap between the lamp and the wall with silicone sealant to prevent rainwater from entering the junction box.

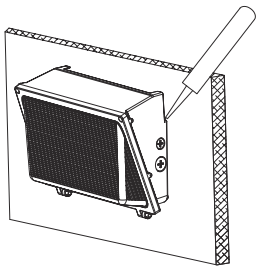

Applications:

